

Vito Seating

Instructions for adjusting working chairs

M1 1:1 back/seat tilt mechanism with independent seat and back angle adjustments

The seat angle and backrest angle can both be locked or floating. With the seat floating and backrest locked the combined seat/back tilts together (recommended setting). Tilt tension is adjusted using the knob under the seat.



Backrest height adjustment (all chair models)

Lift the back to raise in steps. After reaching maximum height the back will drop back down to the lowest position.

Optional inflatable lumbar support (where fitted – all chair models)

Squeeze the bulb to increase the lumbar curve. Press the small button adjacent to the bulb to release the pressure and decrease the lumbar curve.

Sliding Seat – G3 model only

Release seat by depressing the small button on the right hand side of the seat and slide seat to the desired position.

M2 Synchro mechanism with 2:1 back/seat movement

Combined seat/back tilt may be locked or floating (recommended). Tilt tension is adjusted using the knob under the front of the seat.



M3 Fixed seat with manual back rake adjustment



M4 Premium Synchro mechanism with 2:1 back/seat movement

Combined seat/back tilt may be locked or floating (recommended). Tilt tension is adjusted using the winding handle at the side of the seat.

M5 Adds forwards tilt function: pull out the small knob on the left side and the range of motion of the seat increases to allow a forward seat tilt.

M6 Adds independent adjustment of the backrest angle. The adjustment wheel sets the initial angle between seat and backrest, which then opens out further as the seat and back recline.

