


## 2 and 3 Lever Operating Mechanism

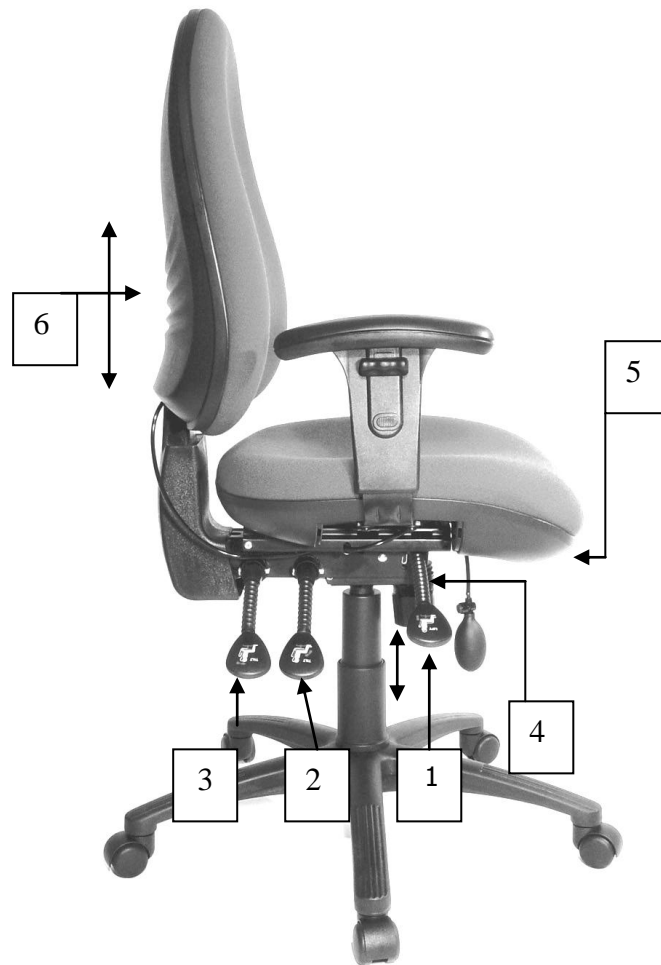

### Operating Instructions:

1. Seat height adjustment: Lift lever (1) to raise and lower seat height.
2. Seat and Back angle adjustment: Lift lever (2) to alter chair positions, push lever down to lock in desired position. Leaving lever in “up” position will allow “free float” option.
3. Back Angle Adjustment: Lift lever (3) to adjust back angle, release lever to lock.
4. Body Weight Tension Adjustment: When seated wind knob (4) clockwise to loosen and anti-clockwise to tighten.
5. Seat Slide Adjustment (When fitted): Lift lever (5) and slide either backwards or forwards to increase or decrease seat depth. Lever is located on left front under seat.
6. Back Height Adjustment (6): Raise the back manually to desired height. Ratchet mechanism will lock in several height positions. When ratchet reaches the top it will release to the lowest setting.

Some of the controls demonstrated here are optional, and may not be fitted to your chair.