

Xenium Basic.

1 SEAT HEIGHT

To raise the chair in height lift this lever whilst unseated. To lower the chair in height lift this lever whilst seated.

2 SYNCHRONOUS ADJUSTMENT

Lifting this lever upwards puts the chair mechanism in free float. To lock the synchronous mechanism simply find a position that is comfortable for you and push the lever down to lock the movement off.

3 ERGOLAST® WEIGHT TENSION CONTROL

First pull this lever out sideways to the right as this will make it easier for you to adjust. By rotating the handle clockwise you will increase the level of resistance to the synchronous action of the chair and by rotating it anti-clockwise, the resistance is reduced. Adjust to suit your body weight.

4 SEAT TILT (This is an optional feature)

Push this lever down and twist backwards towards the rear of the chair to unlock the independent seat tilt mechanism. Adjust the seat in angle back or forth and lock in the desired position by pulling this lever forwards towards the front of the chair. It will automatically twist upwards as you do this.

5 SLIDING SEAT MECHANISM

Depress this button and slide the seat back or forth to adjust the seat depth to your upper leg length. Releasing the button will lock the seat in place.

6 BACK REST HEIGHT ADJUSTMENT

From the seated position reach behind the chair and depress both of the buttons located on the back rest frame simultaneously. Whilst keeping both buttons pressed, raise or lower the back rest until the desired height is reached. Releasing both buttons will lock the back rest to your chosen height.

7 ARM REST WIDTH ADJUSTMENT

Loosening these levers by gently pushing them down will enable you to adjust the width of the arm rests from underneath the seat pan. Slide the arm rests in or out to increase or decrease the width between the arms and lock into place by lifting the levers upwards.

8 ARM REST HEIGHT ADJUSTMENT

Press and hold this button, raise or lower the arm rest to the desired position and release the button to lock the arm rest in place.

NB. Alternative arm rests are available for this chair. If you have a model other than the one pictured you will find the height adjustment button located on the outside of the arm rest column.

9 ARM REST PAD ADJUSTMENT

The arm rest top pads can be slid back and forth from the central position. They can also be rotated through 360° *

* NB. Alternative arm rests are available for this chair. If you have a model other than the one pictured you will find the rotation of the arm rest pad requires you to depress a button located near the armrest top.

10 PNEUMATIC LUMBAR SUPPORT (This is an optional feature)

If your chair is fitted with an additional adjustable lumbar support you can increase or decrease the amount of support you receive in your lumbar region. To increase the amount of support squeeze the black pump repeatedly until you are comfortable with the support in your back. To reduce the level of support simply press and hold the release valve located at the neck area of the hand pump.

