











## Box contents

- 1. Balance Keyboard
- **2.** Wireless Receiver
- 3. User Guide
- Two AAA Batteries




## **Keyboard Setup**



Step 1:

Remove the back housing and insert AAA batteries.

Remove Wireless Receiver from housing.

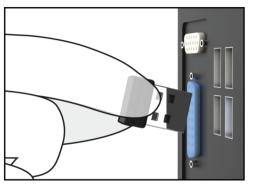


Step 2:

Plug the Wireless Receiver into an open USB port.




Step 3:

Enjoy using your Balance Keyboard!

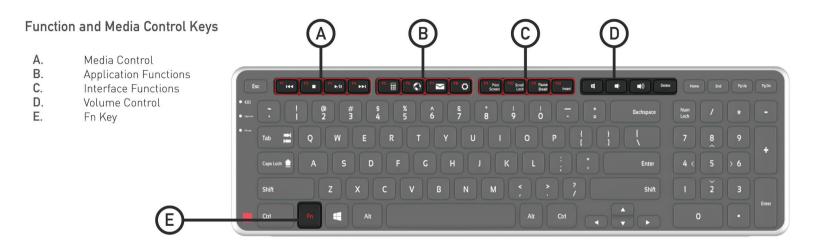

## Function and Media Control Keys

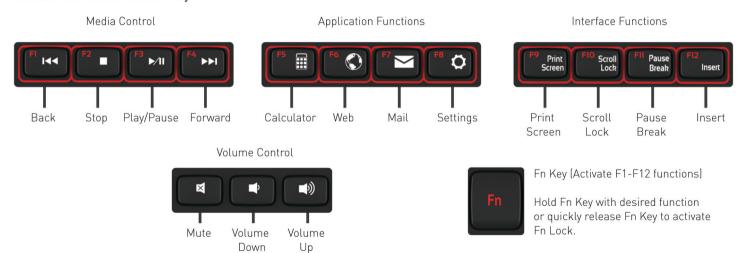

## **Connection Troubleshooting**

In the event that your Balance Keyboard looses connection, please try the following solutions:

- Make sure the wireless receiver is plugged into a working USB port on your computer. Unplug the
  receiver and re-insert it after a few seconds.
- Verify that the batteries in the keyboard are fully charged. Remove one battery and re-insert it after a
  couple of seconds.
- Confirm that the wireless receiver is not too far from the keyboard, or too close to other wireless
  devices.
- Press the Reset button under the keyboard while the button itself is very close to the wireless receiver.

If trouble persists please consult our online troubleshooting guide at contourdesign.com

For more information please visit: www.contourdesign.com

Contour Design, Inc.
10 Industrial Drive
Windham, New Hampshire 03087, USA
Phone: [603] 893-4556
Email: ergoinfo@contourdesign.com

Contour Design Europe A/S International House Center Boulevard 5 2300 Copenhagen S., Denmark Phone: +45 32 46 11 20 Email: info@contour-design.com

Tested to comply with FCC standards







