

adapt[®] 200 easiSpec


Seating Assessment / Specification Form

User Weight





User Height

Min: 1200mm
Max: 2100mm

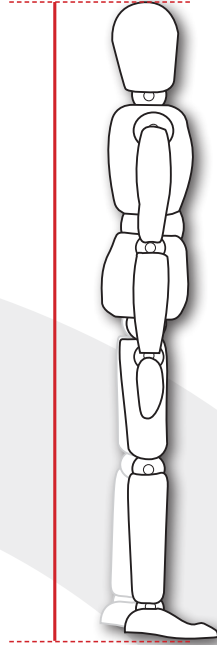

Chair Action

Asynchronous
Pelvic-Tilt

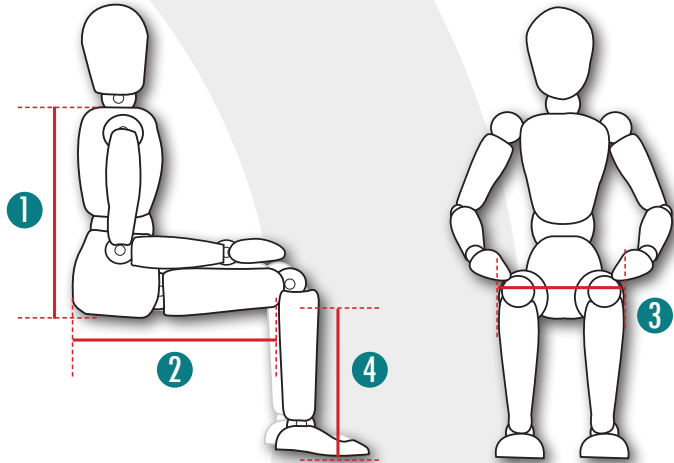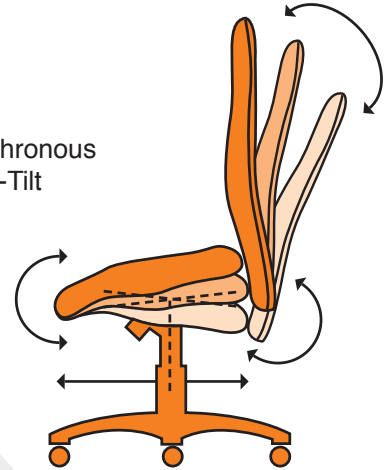

- ① Seat to Shoulder (Back Height)
- ② Back of Buttock to Back of Knee (Seat Depth)
- ③ Hip Width at widest point (Seat width)
- ④ Floor to Underside of Knee (Seat Height)

Min	Max
370mm	690mm
330mm	440mm
270mm	410mm
360mm	640mm*

*Optional Brake Loaded Footrest/Step will allow for any minimum lower leg dimension

HWS
YOUR COMFORT - TAKEN SERIOUSLY

01639 844500

www.healthyworkstations.com

Client

Company


Assessor

Date

Seating Assessment / Specification Form

BACK REST

Please enter required dimensions

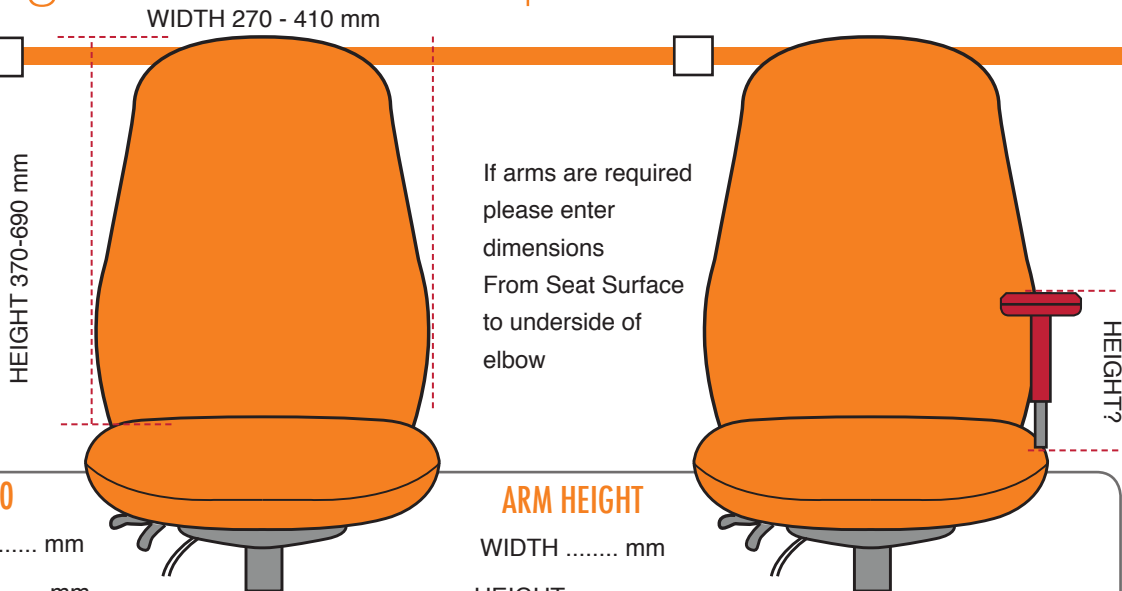

CHAIR CODE

200

Width Required

WIDTH mm

Height Required

HEIGHT mm

ARM HEIGHT


WIDTH mm

HEIGHT mm

- If using a neck support, subtract 80mm from the Nape of Neck measurement in order to calculate correct back height
- Adapt 200 chairs are truly bespoke; as such all dimensions are required in order to manufacture

SEAT

Please enter required dimensions

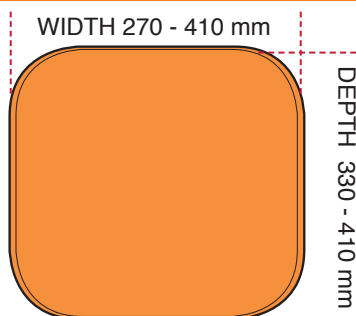

- Use Back of Buttock to Back of Knee measurement and SUBTRACT 30mm to calculate optimum seat depth
- Seat depths below 350mm will be fixed, above 350mm seat slide depth adjustment of +50mm will be included to a maximum depth of 410mm
- Use Hip to Hip measurement and ADD 50mm to calculate the optimum seat width

CHAIR CODE

200

Width Required


SEATW: to.....mm

Depth Required

SEATD: to.....mm

SEAT HEIGHT

Please tick required option (approx heights)

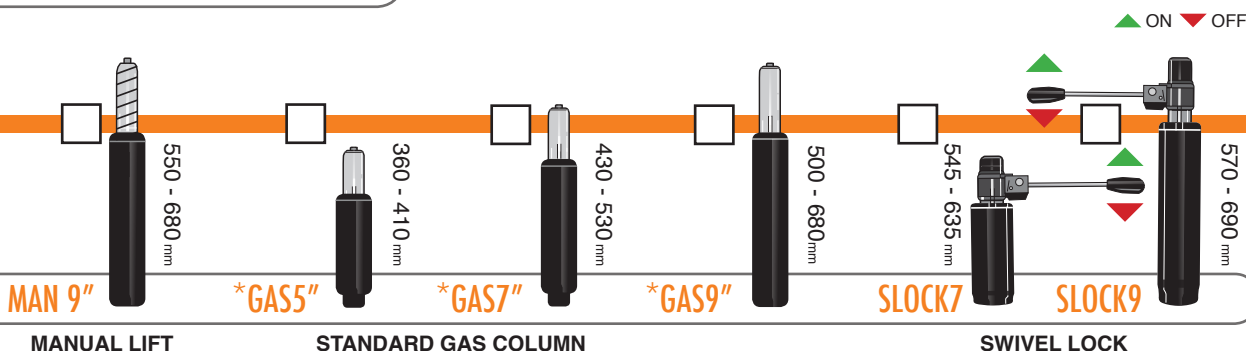

GAS CODE

MAN 9"

MANUAL LIFT

***GAS5"**

STANDARD GAS COLUMN

***GAS7"**

***GAS9"**

SLOCK7

SWIVEL LOCK

SLOCK9

BASE

Please tick required option



Standard Black Base.
GAS2 fitted as standard



Polished Aluminium Base



Movement Lock
(Non-swivel Gas fitted as standard. Please specify gas lift height required).



Level One Adaptations

ARM OPTIONS

Please tick required option

ARM CODE HAA* 1234* 3D Trigger 4D* WSARM MSA†

ARM PAD ENHANCEMENTS

Please tick required option

PAD CODE UPARM GEL PADS

*ADARM +50mm *ADARM -50mm

ADARM bracket will add or subtract 50mm from arm height (measured from seat surface to top of arm pad). Applies only to arm options marked with asterisk.

+ or - 50mm

HEAD SUPPORT

Please tick required option

HEAD CODE HEAD REST NECK ROLL NECK CURVE

Compatible with HAA & 1234
 • Standard seat surface to underside of arm Arm Height is 150 - 240mm. If not suitable use **ADARM** option

SEAT ENHANCEMENT

Please tick required option

ENHANCE CODE /CC /CZ /MFS L / R / BOTH /TS /ECORE

Please tick required option

ENHANCE CODE WAVE SPLIT SEWN SEAT

A sewn seat will provide an even thickness of foam and a uniform tension of fabric across the surface of the seat resulting in a superior sit. This is particularly beneficial when specifying extra layers of memory foam in order to achieve a softer sit

Please specify required **WAVE SEAT DEPTH** ie. Back Buttock to Back of Knee L&R -30mm
 R (when sitting)mm L (when sitting)mm


**(OPTIONAL)
BACK
ENHANCEMENTS**

Level two Adaptations (continued)

adapt[®]200 easiSpec

Unless stated otherwise, lumbar cell position will be centered at approx 180mm above seat surface as standard

Please tick box option and state the required dimensions if different from those shown

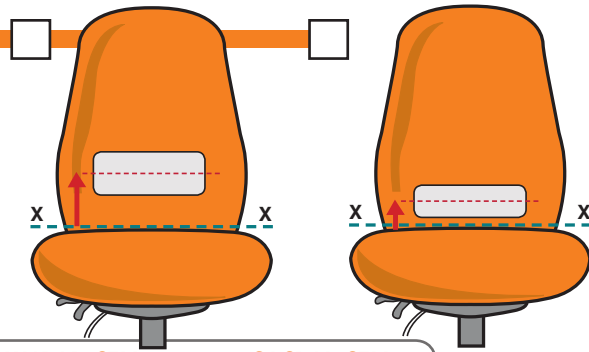


CODE **LUMBAR CELL** **SACRAL CELL**

Measure distance from seat surface to centre of Air Cell and enter as X+




LOCATE CENTRE OF AIR CELL AT
X+mm

Measure distance from seat surface to centre of Air Cell and enter as X+

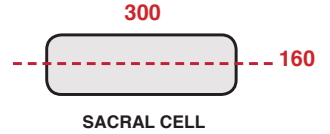


LOCATE CENTRE OF AIR CELL AT
X+mm

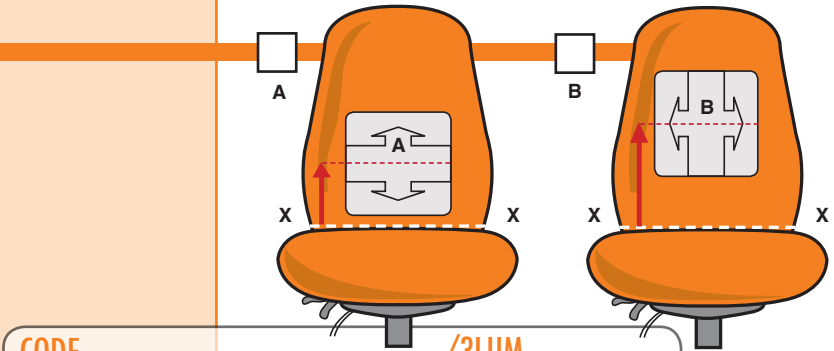


CODE **/3LUM**

Measure distance from seat surface to centre of Air Cell and enter as X+

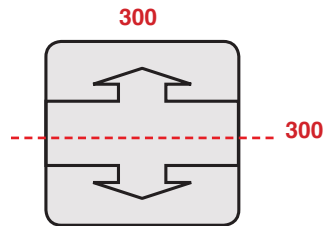


/3LUM REACTIVE LUMBAR CELL
LOCATE CENTRE OF AIR CELL AT
X+mm

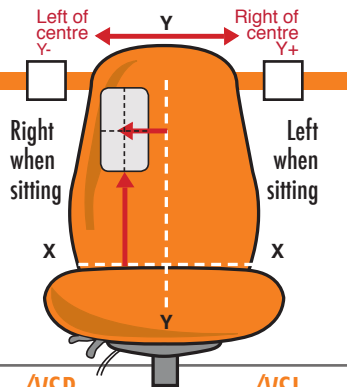


CODE **/VSR** **/VSL**

Measure distance from seat surface to centre of Air Cell and enter as X+

Measure distance from centre of back rest to centre of Air Cell and enter as Y+/-

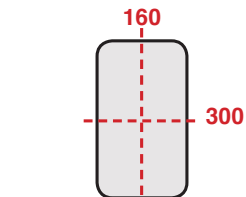


/VSL /VSR VERTICAL CELL
LOCATE CENTRE OF AIR CELL AT
X+mm
Y+mm
Y-mm

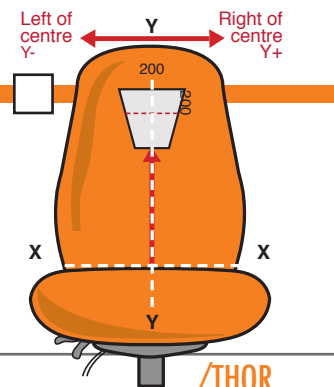


CODE **/THOR**

Measure distance from seat surface to centre of Air Cell and enter as X+

If not using centrally, measure distance from centre of back rest to centre of Air Cell and enter as Y+/-

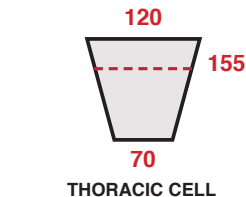

THORACIC CELL
LOCATE CENTRE OF AIR CELL AT
X+mm
And (if not central)
Y+mm
Y-mm

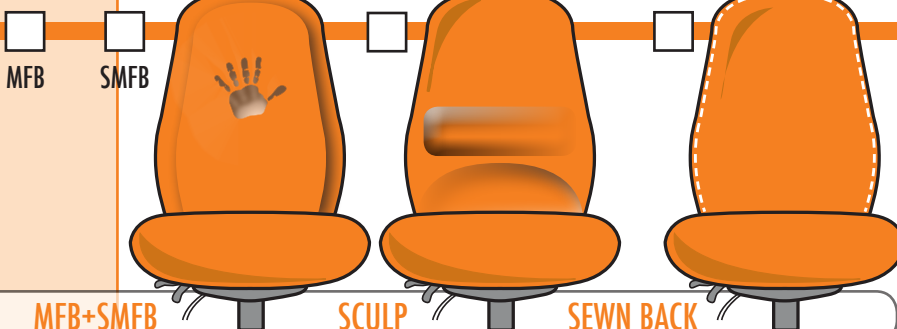

CODE **MFB+SMFB** **SCULP** **SEWN BACK**

Stitched Backrest as standard on SMFB

SOFT WHEEL CASTORS

CODE **SWC**

BRAKE UNLOADED CASTORS

CODE **BUC**

BRAKE LOADED CASTORS

CODE **BLC**